
SEAL REPAIR KITS AND SEAL OPTIONS


PART NUMBERS FOR SEAL REPAIR KITS

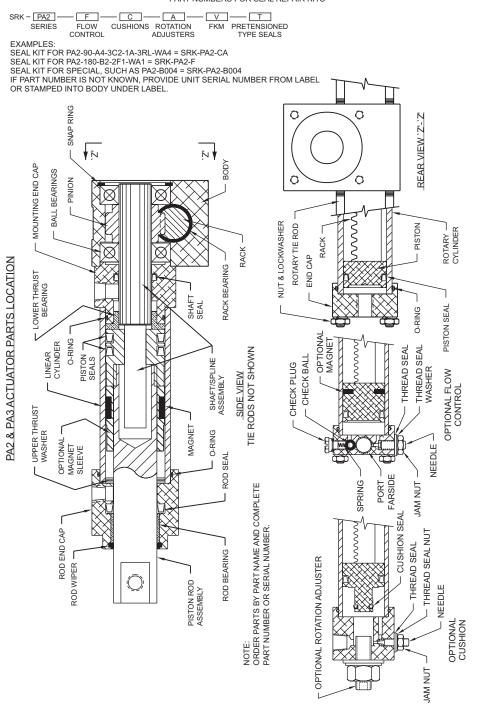



11 Sunshine Blvd. Ormond Beach, Fl. 32174 Phone: 386/676-6377 Fax: 386/676-6379 Email: sales@rotomation.com Website: www.rotomation.com

PA2 & PA3 PICK & PLACE ACTUATOR INSTALLATION AND SETUP

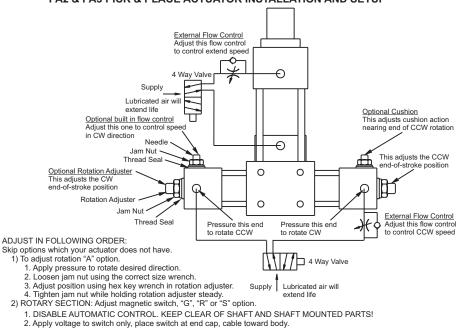

2a) For signal at end of rotation.

1. Drive unit to end of rotation. 2. Move switch toward body until LED glows, clamp.

3. Set flow controls for low speed.

4. Cycle to check operating point, adjust as required.

2b) For signal before end of rotation. 1. Apply low pressure (5 psi for standard seals) to

cylinder being set.

2. Position shaft to switching point.

3. Move switch toward body until LED glows, clamp

4. Set flow controls for low speed.

5. Cycle to check operating point, adjust as required.

3) LINEAR SECTION: Adjust magnetic switch, "G", "R" or "S" option. 1. Adjust linear speed with external flow

controls or reduce line pressure

3a) For signal at end of stroke.

1. Remove air pressure & place rod at end of stroke.

2. Adjust switch inward from end cap until LED glows, clamp.


3b) For intermediate point of signal.

Follow above procedure with load positioned at desired operating point.

2. Cycle to check operating point, adjust

as required.

ACTUATOR SWITCH PLACEMENT

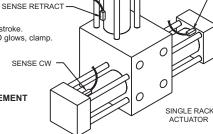

ccw(a)cw

SENSE EXTEND

SENSE CCW

4) To adjust speed "F" option.

Flow controls may be built in ("F" option) or external (not supplied by Rotomation, Inc.)

To adjust built in controls:

. Loosen jam nut.

2. Tighten needle to reduce speed, loosen to increase speed. Make small adjustments.

3. Tighten jam nut while holding needle steady.

5) Adjust Cushion "C" option.

1. Loosen jam nut.

2. Tighten needle to increase stiffness of cushion, loosen to decrease. If cushion causes bounce, loosen needle.

3. Tighten jam nut while holding needle steady.

SWITCH LEADS

OPTION

LEAD

Standard Lead

GL, RL, SL 9', end stripped

Connection option

GC, RC, SC

6" pigtail with male connector

EXTENSION CABLES (PURCHASE SEPARATELY)

PART NUMBER


DESCRIPTION

CC2 2 m cable, female connector one end, stripped other end.

CC5 5 m cable, female connector one end, stripped other end.

- KEEP MAGNETIC MATERIAL AWAY -

SENSING

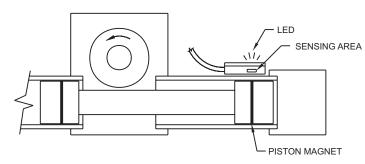


APPROACHING PISTON MAGNET ACTIVATES SENSOR, OPERATES SWITCH AND LED. PLACE SWITCH AS CLOSE AS POSSIBLE TO END CAP FOR CORRECT OPERATING POSITION


SWITCH MOUNTING

TIE ROD CLAMP

STRAP CLAMP

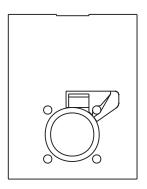


SERIES PA2 ROTARY

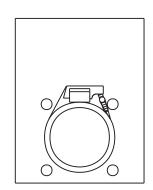


SERIES PA2 LINEAR SERIES PA3 ROTARY & LINEAR

TIGHTEN STRAP CLAMP TO HOLD SWITCH STABLE. DO NOT DISTORT SWITCH CASE.

ROTOMATION REED SWITCH - OPTION G

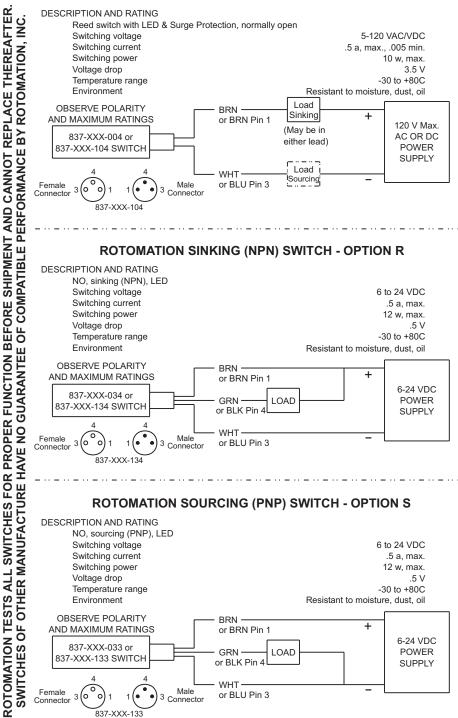

ROTOMATION SINKING (NPN) SWITCH - OPTION R

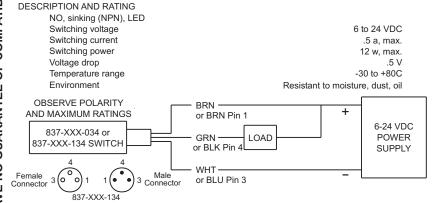

ROTOMATION SOURCING (PNP) SWITCH - OPTION S

