





X4 ACTUATOR OPTIONS





EXTENDED PAWL SHAFT (SYMBOL: E)

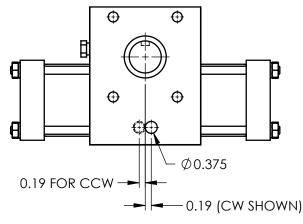

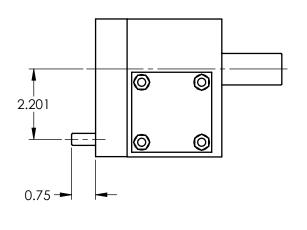

PAWL SHAFT MOVES 7° BETWEEN INDEX AND RESET (CAM DRIVEN AT RESET AND SPRING DRIVEN AT INDEX. USE NON-CONTACT SENSOR ONLY).

MOUNTING PLATE OPTIONS (SYMBOL: M, N, OR P)

